

KRAIBURG VITA

prerequisites:




concrete:

- min. 10 cm thick
- no holes
- no elevations

mats:


even temperature:
min. 5° C to max. 30° C
(store according to initial temperature)

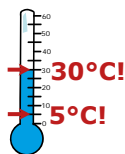


for animal well-being some litter is necessary to absorb moisture (e.g. soft milled straw or mineral material)

You will need this:


measuring:

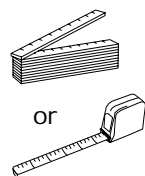


marking:



cutting:

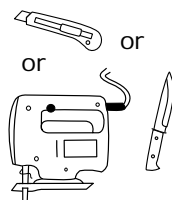

drilling and installing:

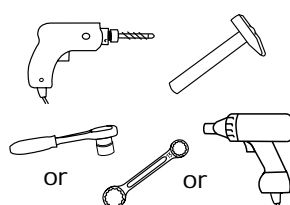

KRAIBURG fastening elements:




framing plugs \varnothing 10 x 100 mm with

- hexagon screw (SW 13) - A2
- washer \varnothing 30 mm - A2


spax screw \varnothing 5 x 60 mm

(fastening elements are part of delivery)

1 Lay out VITA Border (frame profiles)

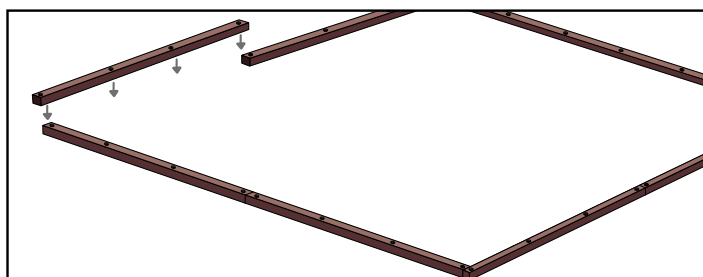

adapt frame profiles to the area to be covered

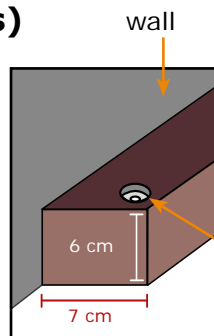


IMPORTANT:
if the frame profile is cut off, set additional drill hole and counterbore!


drill hole at the inner edge

2 Fasten VITA Border (frame profiles) through pre-drilled holes


> framing plugs 10 x 100 mm

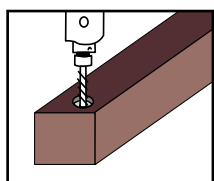

drill through pilot hole

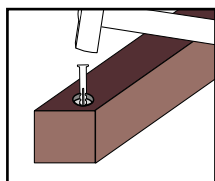

pound the plastic plugs in flush

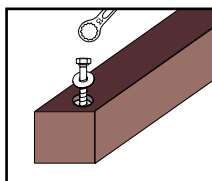


fasten screws and washers

IMPORTANT:
fasten screws until they are seated evenly fast.
Do not overtighten!

3 Fit VITA Cup (lower mats) into the assembled frame

open cups on upper side

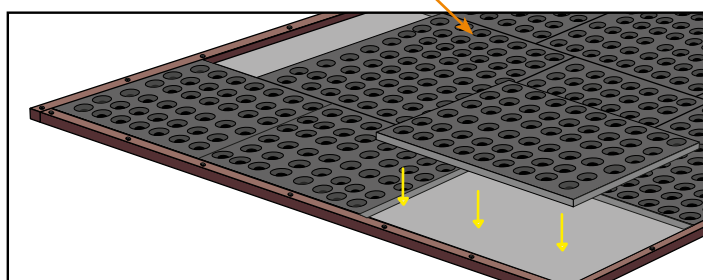


Fill in complete area seamlessly with lower mats, if necessary, cut the mats to fit

Information:
lower mats can be adjoined cross- and/or lengthwise





④ Lay out KRAI-PUR (foam) completely onto lower mats

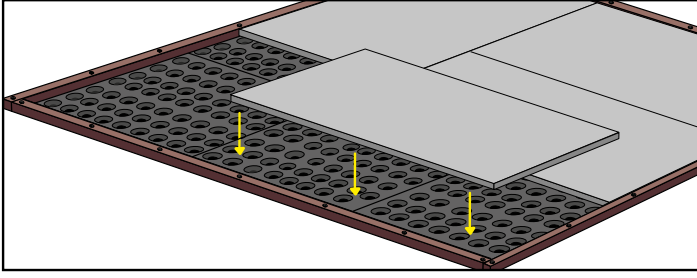


adjoin foam mats seamlessly, if necessary, cut to fit

i foam can be adjoined cross- and/or lengthwise

⑤ Roll out and position VITA LongLine (top covering)

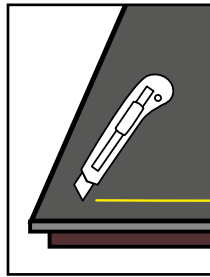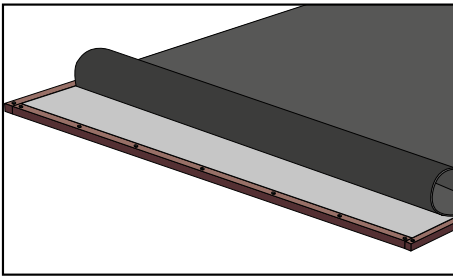


cut off overlaying mat parts at the edges

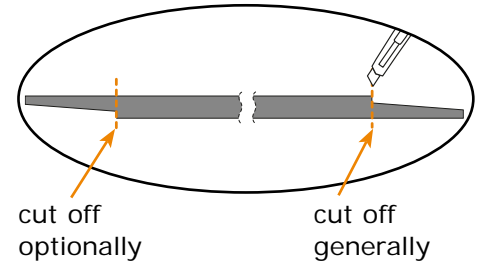


⑥ Fasten VITA LongLine (top covering) with VITA Top (covering strip)

A lay covering strips onto the top covering along the walls

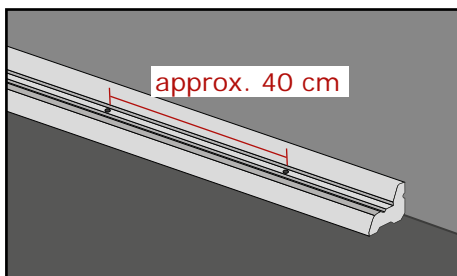

- high end outwards
- flush to wall

B fasten approx. every 40 cm
> **spax screw 5 x 60 mm**

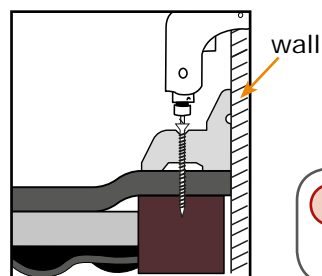

! fasten screws until they are seated evenly fast.
Do not overtighten!